

# **Layer 2 Protocol Tunnel Configuration Commands**

# Table of Contents

<b>1</b>	<b>Layer 2 Protocol Tunnel Configuration Commands.....</b>	<b>- 1 -</b>
1.1	Introduction.....	- 1 -
1.2	Configuring Layer 2 Protocol Tunnel.....	- 1 -
1.3	Configuration Example of Layer 2 Protocol Tunnel.....	- 1 -

# 1 Layer 2 Protocol Tunnel Configuration Commands

## 1.1 Introduction

Layer 2 protocol tunnel allows users between two sides of the switch to transmit the specified layer 2 protocol on their own network without being influenced by the relevant layer 2 software module of the switch. The switch is a transparent media for users.


## 1.2 Configuring Layer 2 Protocol Tunnel

Use command line on the interface of the switch to configure tunnel function of the layer 2 protocol. The configuration steps are as follows:

command	description
<b>configure</b>	Enters global configuration mode.
<b>interface</b> <intf_name>	Enters interface configuration mode of the switch. Only the switch port supports layer 2 protocol tunnel (including physical port and aggregation port).
[no] <b>l2protocol-tunnel</b> [stp]	Enables layer 2 protocol of the tunnel function. Currently we only support tunnel function of stp protocol.
<b>[CTRL] + Z</b>	Returns to management configuration mode.
<b>write</b>	Saves configuration.

## 1.3 Configuration Example of Layer 2 Protocol Tunnel

Network environment is as follows:

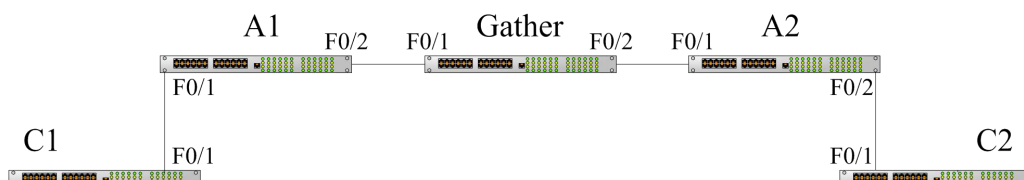

A1/A2/Gather belong to core network, C1/C2 are switches distributed in two places. Customer wants to combine two of its network to one, that is, the core network is a transparent transmission channel for the customer. If user wants to realize the

transparent transmission of STP, then the following configurations should be configured on each switch:

- (1) The f0/2 of Switch A1, f0/1 and f0/2 of Gather, f0/1 of A2 should be configured to trunk mode.
- (2) The f0/1 of switch A1, f0/2 of A2 should be configured to Access, and enables tunnel function of the STP protocol.