

Security Configuration Commands

Table of Contents

1	AAA Configuration Commands.....	- 1 -
1.1	AAA Overview.....	- 1 -
1.1.1	AAA Security Service.....	- 1 -
1.1.2	Benefits of Using AAA.....	- 2 -
1.1.3	AAA Principles.....	- 2 -
1.1.4	Method Lists.....	- 3 -
1.2	AAA Configuration Process.....	- 5 -
1.2.1	Overview of the AAA Configuration Process.....	- 5 -
1.3	AAA Authentication Configuration Task List.....	- 5 -
1.4	AAA Authentication Configuration Task.....	- 6 -
1.4.1	Configuring Login Authentication Using AAA.....	- 6 -
1.4.2	Enabling Password Protection at the Privileged Level.....	- 8 -
1.4.3	Configuring Message Banners for AAA Authentication.....	- 9 -
1.4.4	AAA authentication username-prompt.....	- 10 -
1.4.5	AAA authentication password-prompt.....	- 11 -
1.4.6	Establishing Username Authentication.....	- 11 -
1.4.7	Establishing Local Privilege Level Authentication Database.....	- 12 -
1.5	AAA Authentication Configuration Example.....	- 12 -

1.6	AAA Authorization Configuration Task List.....	- 13 -
1.7	AAA Authorization Configuration Task.....	- 13 -
1.7.1	Configuring EXEC Authorization using AAA.....	- 13 -
1.8	AAA Authorization Example.....	- 15 -
1.9	AAA Accounting Configuration Task List.....	- 16 -
1.10	AAA Accounting Configuration Task.....	- 16 -
1.10.1	Configuring Accounting Connection using AAA.....	- 16 -
1.10.2	Configuring Network Accounting using AAA.....	- 17 -
1.10.3	AAA accounting update.....	- 18 -
1.10.4	AAA accounting suppress null-username.....	- 18 -
2	Configuring RADIUS.....	- 19 -
2.1	Introduction.....	- 19 -
2.1.1	RADIUS Introduction.....	- 19 -
2.1.2	RADIUS Operation.....	- 20 -
2.2	RADIUS Configuration Task List.....	- 21 -
2.3	RADIUS Configuration Task List.....	- 21 -
2.4	RADIUS Configuration Task.....	- 22 -
2.4.1	Configuring Switch to RADIUS Server Communication.....	- 22 -
2.4.2	Configuring Switch to Use Vendor-Specific RADIUS Attributes.....	- 22 -
2.4.3	Specifying RADIUS Authentication.....	- 23 -
2.4.4	Specifying RADIUS Authorization.....	- 23 -

2.4.5	Specifying RADIUS Accounting.....	- 23 -
2.5	RADIUS Configuration Examples.....	- 24 -
2.5.1	RADIUS Authentication and Authorization Example.....	- 24 -
2.5.2	RADIUS Authentication, Authorization, and Accounting Example.....	- 24 -

1 AAA Configuration Commands

1.1 AAA Overview

Access control is the way to control access to the switch and the network access service. Authentication, authorization, and accounting (AAA) network security services provide the primary framework to improve network security performance.

1.1.1 AAA Security Service

AAA is an architectural framework for configuring a set of three independent security functions in a consistent manner. AAA provides a modular way of performing the following services:

- Authentication—Provide the method of identifying users, including login and password dialog, and encryption depending on the security protocol you select.

Authentication is the way that a user is identified prior to being allowed access to the network and network services. You configure AAA authentication by defining a named list of authentication methods, and then applying that list to various interfaces. The method list defines the types of authentication to be performed and the sequence in which they will be performed; it must be applied to a specific interface before any of the defined authentication methods will be performed. The only exception is the default method list (which is named "default"). The default method list is automatically applied to all interfaces if no other method list is defined. A defined method list overrides the default method list. For more information, please refer to the chapter "Configuring Authentication."

- Authorization—Provide the method for remote access to control the privilege of user's server.

AAA authorization works by assembling a set of attributes that describe what the user is authorized to perform. These attributes are compared to the information contained in a database for a given user and the result is returned to AAA to determine the user's actual capabilities and restrictions. The database can be located locally on the access server or router or it can be hosted remotely on a RADIUS or TACACS+ security server. Remote security servers, such as RADIUS and TACACS+, authorize users for specific rights by associating attribute-value (AV) pairs, which define those rights with the appropriate user.

All authorization methods must be defined through AAA. For more information, please refer to the chapter "Configuring Authorization."

- Accounting—Provides the method for collecting and sending security server information used for billing, auditing, and reporting, such as user identities, start and stop times, executed commands (such as PPP), number of packets, and number of bytes.

Accounting enables you to track the services users are accessing as well as the amount of network resources they are consuming. When AAA accounting is activated, the network access server reports user activity to the RADIUS or TACACS+ security server (depending on which security method you have implemented) in the form of accounting records. Each accounting record is comprised of accounting AV pairs and is stored on the security server. This data can be analyzed for network management, client billing, and/or auditing. All accounting methods must be defined through AAA. As with authentication and authorization, you configure AAA accounting by defining a named list of accounting methods, and then applying that list to various interfaces. For more information, please refer to the chapter "Configuring Accounting."

1.1.2 Benefits of Using AAA

AAA provides the following benefits:

- Flexible and ease to control
- Easy to upgrade
- Standardized authentication methods, such as RADIUS, TACACS+
- Multiple backup systems

1.1.3 AAA Principles

AAA is designed to enable you to dynamically configure the type of authentication, authorization you want on a per-line (per-user) or per-service (for example, IP, IPX, or VPDN) basis and accounting. You define the type of authentication and authorization you want by creating method lists, then applying those method lists to specific services or interfaces.

1.1.4 Method Lists

To configure an AAA, define a method list of name first and then apply the list to a specific service or interface. The list of methods defines all AAA types to be executed and the order in which they are to be executed; any method list defined must be applied to a specific interface or service before being executed. The only exception is the default method list (default). The default method list is automatically applied to all interfaces or services. Unless the interface explicitly refers to other method list, the method list will override the default method list.

A method list is a sequential list that defines the authentication methods used to authenticate a user. Method lists enable you to designate one or more security protocols to be used for authentication, thus ensuring a backup system for authentication in case the initial method fails. The software of our switches use the first method listed to authenticate users; if that method does not respond, software selects the next authentication method in the method list. This process continues until there is successful communication with a listed authentication method or the authentication method list is exhausted, in which case authentication fails.

Note:

The software attempts authentication with the next listed authentication method only when there is no response from the previous method. If authentication fails at any point in this cycle—meaning that the security server or local username database responds by denying the user access—the authentication process stops and no other authentication methods are attempted.

The following figures show a typical AAA network configuration that includes four security servers: R1 and R2 are RADIUS servers, and T1 and T2 are TACACS+ servers.

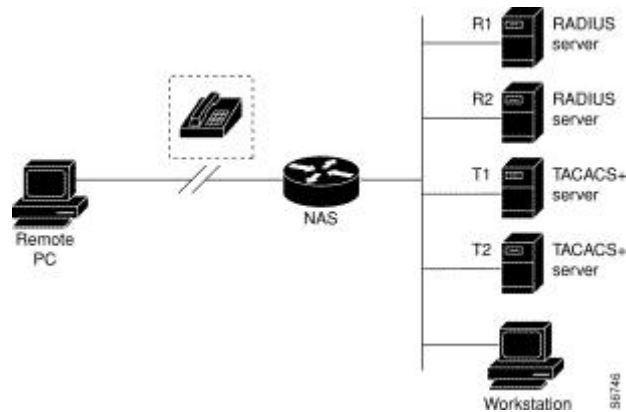


Figure1- 1 Typical AAA Network Configuration

In this example, **default** is the name for method list, including listing the protocol in the method list and the order in which they are to be queried after the method list name. The default list is automatically applied to all interfaces.

When a remote user attempts to dial in to the network, the network access server first queries R1 for authentication information. If R1 authenticates the user, it issues a PASS response to the network access server and the user is allowed to access the network. If R1 returns a FAIL response, the user is denied access and the session is terminated. If R1 does not respond, then the network access server processes that as an ERROR and queries R2 for authentication information. This pattern continues through the remaining designated methods until the user is either authenticated or rejected, or until the session is terminated. If all of the authentication methods return errors, the network access server will process the session as a failure, and the session will be terminated.

Note:

A FAIL response is significantly different from an ERROR. A FAIL means that the user has not met the criteria contained in the applicable authentication database to be successfully authenticated. Authentication ends with a FAIL response. An ERROR means that the security server has not responded to an authentication query. Because of this, no authentication has been attempted. Only when an ERROR is detected, will AAA select the next authentication method defined in the authentication method list.

Suppose that the system administrator wants to apply the method list only to a particular port or a specific port. In this case, the system administrator should create a list of non-default methods and then apply the named list to the appropriate port.

1.2 AAA Configuration Process

You must first decide what kind of security solution you want to implement. You need to assess the security risks in your particular network and decide on the appropriate means to prevent unauthorized entry and attack.

1.2.1 Overview of the AAA Configuration Process

Configuring AAA is relatively simple after you understand the basic process involved. To configure security on our switches or access server using AAA, follow this process:

- If you decide to use a security server, configure security protocol parameters, such as RADIUS, TACACS+.
- Define the method lists for authentication by using an AAA authentication command.
- Apply the method lists to a particular interface or line, if required.
- (Optional) Configure authorization using the `aaa authorization` command.
- (Optional) Configure accounting using the `aaa accounting` command.

1.3 AAA Authentication Configuration Task List

- Configuring Login Authentication Using AAA
- Configuring PPP Authentication Using AAA
- Enabling Password Protection at the Privileged Level
- Configuring Message Banners for AAA Authentication
- AAA authentication username-prompt
- AAA authentication password-prompt
- Establishing Username Authentication
- Establishing Local Privilege Level Authentication Database

1.4 AAA Authentication Configuration Task

To configure AAA authentication, perform the following configuration processes:

- (1) If you decide to use a security server, configure security protocol parameters, such as RADIUS, TACACS+.
- (2) Define the method lists for authentication by using an AAA authentication command.
- (3) Apply the method lists to a particular interface or line, if required.

1.4.1 Configuring Login Authentication Using AAA

The AAA security services facilitate a variety of login authentication methods. Use the `aaa authentication login` command to enable AAA authentication no matter which of the supported login authentication methods you decide to use. With the `aaa authentication login` command, you create one or more lists of authentication methods that are tried at login. These lists are applied using the login authentication line configuration command.

To configure login authentication by using AAA, use the following commands in global configuration mode:

command	purpose
aaa authentication login { default <i>list-name</i> } <i>method1</i> [<i>method2...</i>]	Create global authentication list.
line [console vtty] <i>line-number</i> [<i>ending-line-number</i>]	Enters line configuration mode.
login authentication { default <i>list-name</i> }	Applies the authentication list to a line or set of lines.

The *list-name* is a character string used to name the list you are creating. The *method* argument refers to the actual method the authentication algorithm tries. The additional methods of authentication are used only if the previous method returns an error, not if it fails. To specify that the authentication should succeed even if all methods return an error, specify **none** as the final method in the command line.

Use **default** to create a default list, and the default list is automatically applied to all interfaces. For example, to specify RADIUS as the default authentication method for user login, use the following command:

aaa authentication login default group radius**Note:**

Because the keyword **none** enables any user logging in to successfully authenticate, it should be used only as a backup method of authentication.

If you cannot find the authentication method list when login in, in addition to the console port login, any other form of login will end with the fail certification.

The following table lists the supported login authentication methods.:

Keyword	description
enable	Uses the enable password for authentication.
group <i>name</i>	Uses named server group for authentication.
group radius	Uses the list of all RADIUS servers for authentication.
line	Uses the line password for authentication.
local	Uses the local username database for authentication.
local-case	Uses case-sensitive local username authentication.
none	Uses no authentication.

(1) Login Authentication Using Enable Password

Use the **aaa authentication login** command with the **enable** method keyword to specify the enable password as the login authentication method. For example, to specify the enable password as the method of user authentication at login when no other method list has been defined, enter the following command:

aaa authentication login default enable**(2) Login Authentication Using Line Password**

Use the **aaa authentication login** command with the **line** method keyword to specify the line password as the login authentication method. For example, to specify the line password as the method of user authentication at login when no other method list has been defined, enter the following command:

aaa authentication login default line

Before you can use a line password as the login authentication method, you need to define a line password.

(3) Login Authentication Using Local Password

Use the `aaa authentication login` command with the `local` method keyword to specify that the Cisco router or access server will use the local username database for authentication. For example, to specify the local username database as the method of user authentication at login when no other method list has been defined, enter the following command:

aaa authentication login default local

For information about adding users into the local username database, refer to the section "Establishing Username Authentication" in this chapter.

(4) Login Authentication Using RADIUS

Use the `aaa authentication login` command with the `radius` method to specify RADIUS as the login authentication method. For example, to specify RADIUS as the method of user authentication at login when no other method list has been defined, enter the following command:

aaa authentication login default radius

Before you can use RADIUS as the login authentication method, you need to enable communication with the RADIUS security server. For more information about establishing communication with a RADIUS server, refer to the chapter "Configuring RADIUS."

1.4.2 Enabling Password Protection at the Privileged Level

Use the `aaa authentication enable default` command to create a series of authentication methods that are used to determine whether a user can access the privileged EXEC command level. You can specify up to four authentication methods. The additional methods of authentication are used only if the previous method returns an error, not if it fails. To specify that the authentication should succeed even if all methods return an error, specify `none` as the final method in the command line.

Use the following command in global configuration mode:

command	purpose
aaa authentication enable default <i>method1 [method2...]</i>	Enables user ID and password checking for users requesting privileged EXEC level.

The method argument refers to the actual list of methods the authentication algorithm tries, in the sequence entered.

The following table lists the supported enable authentication methods.

Keyword	Description
enable	Uses the enable password for authentication.
group <i>group-name</i>	Uses the naming server group for authentication
group radius	Uses the list of all RADIUS hosts for authentication.
line	Uses the line password for authentication.
none	Uses no authentication.

When the enable authentication method is configured as remote authentication, RADIUS is used for authentication. Following is the description:

(1) Use RADIUS for enable authentication

The user name is \$ENABLElevel\$, and level is the privilege level that the user wants to enter. For example, if a user wants to enter a privilege level of level 7, enter the command enable 7. If RADIUS authentication is configured for authentication, the user name for the Radius-server host is \$ENABLE7\$. By default, the privilege level entered is 15, that is, when using RADIUS for authentication, the user name for Radius-server host is \$ENABLE15\$. It is necessary to configure the corresponding user name and password on the Radius-server host in advance. In particular, in the user database of the Radius-server host, specify the service type (Service-Type) of the user for privileged authentication is 6 which is Admin-User.

1.4.3 Configuring Message Banners for AAA Authentication

AAA supports the use of configurable, personalized login and failed-login banners. You can configure message banners that will be displayed when a user logs in to the system to be authenticated using AAA and when, for whatever reason, authentication fails.

(1) Configuring a Login Banner

Use the following commands in global configuration mode:

command	purpose
aaa authentication banner <i>delimiter text-string delimiter</i>	Creates a personalized login banner.

(2) Configuring a Failed-Login Banner

Use the following commands in global configuration mode:

command	purpose
aaa authentication fail-message <i>delimiter text-string delimiter</i>	Creates a message to be displayed when a user fails login.

(3) Instruction

To create a login banner, you need to configure a delimiting character, which notifies the system that the following text string is to be displayed as the banner, and then the text string itself. The delimiting character is repeated at the end of the text string to signify the end of the banner.

1.4.4 AAA authentication username-prompt

To change the text displayed when users are prompted to enter a username, use the `aaa authentication username-prompt` command in global configuration mode. To return to the default username prompt text, use the `no` form of this command:

Username:

The `aaa authentication username-prompt` command does not change any dialog that is supplied by a remote TACACS+ server or RADIUS server. Use the following command to configure in global configuration mode:

command	purpose
aaa authentication username-prompt <i>text-string</i>	String of text that will be displayed when the user is prompted to enter a username.

1.4.5 AAA authentication password-prompt

To change the text displayed when users are prompted for a password, use the `aaa authentication password-prompt` command in global configuration mode. To return to the default password prompt text, use the `no` form of this command:

password:

The `aaa authentication password-prompt` command does not change any dialog that is supplied by a remote TACACS+ server or RADIUS server. Use the following command to configure in global configuration mode:

command	purpose
<code>aaa authentication password-prompt text-string</code>	String of text that will be displayed when the user is prompted to enter a password.

1.4.6 Establishing Username Authentication

You can create a username-based authentication system, which is useful in the following situations:

Provide authentication method for users when it does not support AAA server (such as RADIUS).

To provide special-case logins: for example, access list verification, no password verification, autocommand execution at login, and "no escape" situations.

To establish username authentication, use the following commands in global configuration mode as needed for your system configuration. Use the `no` form of this command to delete a username.

`username name {nopassword | password password | password encryption-type encrypted-password}`

`username name [autocommand command]`

`username name [callback-dialstring telephone-number]`

`username name [callback-rotary rotary-group-number]`

`username name [callback-line [tty | aux] line-number [ending-line-number]]`

username *name* [**noescape**] [**nohangup**]

username *name* [**privilege** *level*]

username *name* [**user-maxlinks** *number*]

no username *name*

1.4.7 Establishing Local Privilege Level Authentication Database

To set a local password to control access to various privilege levels, use the **enable password** command in global configuration mode. To remove the password requirement, use the **no** form of this command.

enable password { [**encryption-type**] *encrypted-password*} [**level** *level*]

no enable password [**level** *level*]

1.5 AAA Authentication Configuration Example

1. RADIUS Authentication Example

This section provides one sample configuration using RADIUS.

The following example shows how to configure the switch to authenticate and authorize using RADIUS:

aaa authentication login radius-login group radius local

aaa authorization network radius-network radius

line vty

login authentication radius-login

The lines in this sample RADIUS authentication and authorization configuration are defined as follows:

- The `aaa authentication login radius-login radius local` command configures the router to use RADIUS for authentication at the login prompt. If RADIUS returns an error, the user is authenticated using the local database.
- The `aaa authentication ppp radius-ppp radius` command configures the software to use PPP authentication using CHAP or PAP if the user has not already logged in. If the EXEC facility has authenticated the user, PPP authentication is not performed.
- The `aaa authorization network radius-network radius` command queries RADIUS for network authorization, address assignment, and other access lists.
- The `login authentication radius-login` command enables the radius-login method list for line 3.

1.6 AAA Authorization Configuration Task List

- Configuring EXEC Authorization using AAA

1.7 AAA Authorization Configuration Task

To configure AAA authorization, perform the following configuration processes:

- (1) If you decide to use a separate security server, configure security protocol parameters, such as RADIUS, TACACS+.
- (2) Define the method lists for authorization by using an `aaa authorization` command. It does not provide authorization server, by default.
- (3) Apply the method lists to a particular interface or line, if necessary.

1.7.1 Configuring EXEC Authorization using AAA

Use `aaa authorization exec` command to run authorization to determine if the user is allowed to run an EXEC shell. This facility might return user profile information such as autocommand information. Use line configuration command `login authorization` to apply these lists. Use the following command in global configuration mode:

command	purpose
<code>aaa authorization exec {default </code>	Establishes global authorization list.

<i>list-name</i> }method1 [method2...]	
line [console vty] <i>line-number</i> [<i>ending-line-number</i>]	Enters the line configuration mode for the lines to which you want to apply the authorization method list.
login authorization { default <i>list-name</i> }	Applies the authorization list to a line or set of lines(in line configuration mode).

The keyword **list-name** is the character string used to name the list of authorization methods. The keyword **method** specifies the actual method during authorization process. Method lists enable you to designate one or more security protocols to be used for authorization, thus ensuring a backup system in case the initial method fails. The system uses the first method listed to authorize users for specific network services; if that method fails to respond, the system selects the next method listed in the method list. This process continues until there is successful communication with a listed authorization method, or all methods defined are exhausted. If all specified methods fail to respond, and you still want the system to enter the EXEC shell, you should specify none as the last authorization method in command line.

Use default parameter to establish a default list, and the default list will apply to all interfaces automatically. For example, use the following command to specify RADIUS as the default authorization method for exec:

aaa authorization exec default group radius

Note:

If no method list is defined, the local authorization service will be unavailable and the authorization is allowed to pass.

The following table lists the currently supported EXEC authorization mode:

keyword	description
group <i>WORD</i>	Uses a named server group for authorization.
group radius	Uses radius authorization.
local	Uses the local database for authorization.
if-authenticated	Allows the user to access the requested function if the user is authenticated.
none	No authorization is performed.

1.8 AAA Authorization Example

1. EXEC local authorization example

This section provides a configuration example that uses local authorization to demonstrate how to configure the switch, and use LOCAL for authentication and authorization:

```
aaa authentication login default local
```

```
aaa authorization exec default local
```

```
!
```

```
username exec1 password 0 abc privilege 15
```

```
username exec2 password 0 abc privilege 10
```

```
username exec3 nopassword
```

```
username exec4 password 0 abc user-maxlinks 10
```

```
username exec5 password 0 abc autocommand telnet 172.16.20.1
```

```
!
```

The lines in this sample RADIUS authorization configuration are defined as follows::

- The `aaa authentication login default local` command defines the default method list of login authentication. This method list applies to all login authentication servers automatically.
- The `aaa authorization exec default local` command defines default method list of exec authorization. The method list automatically applies to all users that need to enter exec shell.
- Username is `exec1`, login password is `abc`, EXEC privileged level is 15(the highest level), that is, when user `exec1` whose privileged level is 15 logs in exec shell, all commands can be checked and performed.

- Username is exec2, login password is abc, EXEC privileged level is 10, that is, when user exec2 whose privileged level is 10 logs in EXEC shell, commands with privileged level less than 10 can be checked and performed.
- Username is exec3, no password is needed for login.
- Username is exec4, login password is abc, the maximum links of the user is 10.
- Username is exec5, login password is abc, user performs telnet 172.16.20.1 immediately when logging in exec shell.

1.9 AAA Accounting Configuration Task List

- Configuring Connection Accounting using AAA
- Configuring Network Accounting using AAA

1.10 AAA Accounting Configuration Task

To configure AAA accounting, perform the following configuration processes:

- (1) If you decide to use a security server, configure security protocol parameters, such as RADIUS, TACACS+.
- (2) Define the method lists for accounting by using an aaa accounting command.
- (3) Apply the method lists to a particular interface or line, if necessary.

1.10.1 Configuring Accounting Connection using AAA

Use the aaa accounting command to enable AAA accounting. To create a method list to provide accounting information about all outbound connections made from the network access server, use the aaa accounting connection command. The outbound connection contains: Telnet, PAD, H323 and rlogin, and we only support H323 now. Use the following command in global configuration mode.

command	purpose
aaa accounting connection {default list-name} {start-stop stop-only none} group groupname	Establishes global accounting list.

The keyword **list-name** is used to name any character string of the establishing list. The keyword **method** specifies the actual method adopted during accounting process.

The following table lists currently supported connection accounting methods:

keyword	description
group <i>WORD</i>	Enables named server group for accounting.
group radius	Enables radius accounting.
none	Disables accounting services for the specified line or interface.
stop-only	Sends a "stop" record accounting notice at the end of the requested user process.
start-stop	RADIUS or TACACS+ sends a "start" accounting notice at the beginning of the requested process and a "stop" accounting notice at the end of the process.

1.10.2 Configuring Network Accounting using AAA

Use the **aaa accounting** command to enable AAA accounting. To create a method list to provide accounting information for PPP or SLIP sessions, use the **aaa accounting network** command in global configuration mode.

command	purpose
aaa accounting network { default <i>list-name</i> } { start-stop stop-only none } group <i>groupname</i>	Enables global accounting list.

The keyword **list-name** is used to name any character string of the establishing list. The keyword **method** specifies the actual method adopted during accounting process.

The following table lists currently supported network accounting methods:

keyword	description
group <i>WORD</i>	Enables named server group for accounting.
group radius	Enables radius accounting.
none	Disables accounting services for the specified line or interface.
stop-only	Sends a "stop" record accounting notice at the end of the requested user process.

start-stop	RADIUS or TACACS+ sends a "start" accounting notice at the beginning of the requested process and a "stop" accounting notice at the end of the process.
------------	---

1.10.3 AAA accounting update

To enable periodic interim accounting records to be sent to the accounting server, use the `aaa accounting update` command in global configuration mode. To disable interim accounting updates, use the `no` form of this command.

Command	purpose
aaa accounting update [<i>newinfo</i>] [<i>periodic number</i>]	Enables AAA accounting update.

If the keyword **newinfo** is used, interim accounting records will be sent to the accounting server every time there is new accounting information to report. An example of this would be when IP Control Protocol (IPCP) completes IP address negotiation with the remote peer. The interim accounting record will include the negotiated IP address used by the remote peer.

When used with the keyword **periodic**, interim accounting records are sent periodically as defined by the argument *number*. The interim accounting record contains all of the accounting information recorded for that user up to the time the accounting record is sent.

When using both the keywords **newinfo** and **periodic**, interim accounting records are sent to the accounting server every time there is new accounting information to report, and accounting records are sent to the accounting server periodically as defined by the argument *number*. For example, if you configure the `aaa accounting update newinfo periodic number` command, all users currently logged in will continue to generate periodic interim accounting records while new users will generate accounting records based on the `newinfo` algorithm.

1.10.4 AAA accounting suppress null-username

To prevent the AAA system from sending accounting records for users whose username string is NULL, use the `aaa accounting suppress null-username` command in global configuration mode. To allow sending records for users with a NULL username, use the `no` form of this command.

aaa accounting suppress null-username

2 Configuring RADIUS

This chapter describes the Remote Authentication Dial-In User Service (RADIUS) security system, defines its operation, and identifies appropriate and inappropriate network environments for using RADIUS technology. The "RADIUS Configuration Task List" section describes how to configure RADIUS with the authentication, authorization, and accounting (AAA) command set.

2.1 Introduction

2.1.1 RADIUS Introduction

RADIUS is a distributed client/server system that secures networks against unauthorized access. In the implementation, RADIUS clients run on switches and send authentication requests to a central RADIUS server that contains all user authentication and network service access information. RADIUS has been implemented in a variety of network environments that require high levels of security while maintaining network access for remote users.

Use RADIUS in the following network environments that require access security:

- Networks with multiple-vendor access servers, each supporting RADIUS. For example, access servers from several vendors use a single RADIUS server-based security database. In an IP-based network with multiple vendors' access servers, dial-in users are authenticated through a RADIUS server that has been customized to work with the Kerberos security system.
- Networks in which a user must only access a single service. Using RADIUS, you can control user access to a single host, to a single utility such as Telnet, or to a single protocol such as Point-to-Point Protocol (PPP). For example, when a user logs in, RADIUS identifies this user as having authorization to run PPP using IP address 10.2.3.4 and the defined access list is started.
- Networks that require resource accounting. You can use RADIUS accounting independent of RADIUS authentication or authorization. The RADIUS accounting functions allow data to be sent at the start and end of services, indicating the amount of resources (such as time, packets, bytes, and so on) used during the session.

RADIUS is not suitable in the following network security situations:

- Multiprotocol access environments. RADIUS does not support the following protocols:
 - AppleTalk Remote Access (ARA)
 - NetBIOS Frame Control Protocol (NBFCP)
- NetWare Asynchronous Services Interface (NASI)
- X.25 PAD connections
- Switch-to-switch situations. RADIUS does not provide two-way authentication.
- Networks using a variety of services. RADIUS generally binds a user to one service model.

2.1.2 RADIUS Operation

When a user attempts to log in and authenticate to an access server using RADIUS, the following steps occur:

- (1) The user is prompted for and enters a username and password.
- (2) The username and encrypted password are sent over the network to the RADIUS server.
- (3) The user receives one of the following responses from the RADIUS server:

ACCEPT—The user is authenticated.

REJECT—The user is not authenticated and is prompted to reenter the username and password, or access is denied.

CHALLENGE—A challenge is issued by the RADIUS server. The challenge collects additional data from the user.

The ACCEPT or REJECT response is bundled with additional data that is used for EXEC or network authorization. You must first complete RADIUS authentication before using

RADIUS authorization. The additional data included with the ACCEPT or REJECT packets consists of the following:

- a. Services that the user can access, including Telnet, rlogin, or local-area transport (LAT) connections, and PPP, Serial Line Internet Protocol (SLIP), or EXEC services.
- b. Connection parameters, including the host or client IP address, access list, and user timeouts.

2.2 RADIUS Configuration Task List

To configure RADIUS on your switch or access server, you must perform the following tasks:

- Use the `aaa authentication global` configuration command to define method lists for RADIUS authentication. For more information about using the `aaa authentication` command, refer to the "Configuring Authentication".
- Use line and interface commands to enable the defined method lists to be used. For more information, refer to the "Configuring Authentication".

The following configuration tasks are optional:

- You may use the `aaa authorization global` command to authorize specific user functions. For more information about using the `aaa authorization` command, refer to the chapter "Configuring Authorization."
- You may use the `aaa accounting` command to enable accounting for RADIUS connections. For more information about using the `aaa accounting` command, refer to the chapter "Configuring Accounting."

2.3 RADIUS Configuration Task List

- Configuring Switch to RADIUS Server Communication
- Configuring Switch to Use Vendor-Specific RADIUS Attributes
- Specifying RADIUS Authentication
- Specifying RADIUS Authorization

- Specifying RADIUS Accounting

2.4 RADIUS Configuration Task

2.4.1 Configuring Switch to RADIUS Server Communication

The RADIUS host is normally a multiuser system running RADIUS server software from Livingston, Merit, Microsoft, or another software provider. A RADIUS server and a switch use a shared secret text string to encrypt passwords and exchange responses. To configure RADIUS to use the AAA security commands, you must specify the host running the RADIUS server daemon and a secret text (key) string that it shares with the router.

To configure per-server RADIUS server communication, use the following command in global configuration mode:

command	purpose
radius-server host <i>ip-address</i> [auth-port <i>port-number</i>][acct-port <i>portnumber</i>]	Specifies the IP address or host name of the remote RADIUS server host and assign authentication and accounting destination port numbers.
radius-server key <i>string</i>	Specifies the shared secret text string used between the router and a RADIUS server.

To configure global communication settings between the switch and a RADIUS server, use the following radius-server commands in global configuration mode::

command	purpose
radius-server retransmit <i>retries</i>	Specifies how many times the switch transmits each RADIUS request to the server before giving up (the default is 2).
radius-server timeout <i>seconds</i>	Specifies for how many seconds a switch waits for a reply to a RADIUS request before retransmitting the request.
radius-server deadtime <i>minutes</i>	Specifies for how many minutes a RADIUS server that is not responding to authentication requests is passed over by requests for RADIUS authentication.

2.4.2 Configuring Switch to Use Vendor-Specific RADIUS Attributes

The Internet Engineering Task Force (IETF) draft standard specifies a method for communicating vendor-specific information between the network access server and the RADIUS server by using the vendor-specific attribute (attribute 26).

Vendor-specific attributes (VSAs) allow vendors to support their own extended attributes not suitable for general use.

For more information about vendor-IDs and VSAs, refer to RFC 2138, Remote Authentication Dial-In User Service (RADIUS). To configure the network access server to recognize and use VSAs, use the following command in global configuration mode:

command	purpose
radius-server vsa send [authentication]	Enables the network access server to recognize and use VSAs as defined by RADIUS IETF attribute 26.

2.4.3 Specifying RADIUS Authentication

After you have identified the RADIUS server and defined the RADIUS authentication key, you must define method lists for RADIUS authentication. Because RADIUS authentication is facilitated through AAA, you must enter the `aaa authentication` command, specifying RADIUS as the authentication method. For more information, refer to the chapter "Configuring Authentication."

2.4.4 Specifying RADIUS Authorization

AAA authorization lets you set parameters that restrict a user's access to the network. Authorization using RADIUS provides one method for remote access control, including one-time authorization or authorization for each service, per-user account list and profile, user group support, and support of IP, IPX, ARA, and Telnet. Because RADIUS authorization is facilitated through AAA, you must issue the `aaa authorization` command, specifying RADIUS as the authorization method. For more information, refer to the chapter "Configuring Authorization."

2.4.5 Specifying RADIUS Accounting

The AAA accounting feature enables you to track the services users are accessing as well as the amount of network resources they are consuming. Because RADIUS accounting is facilitated through AAA, you must issue the `aaa accounting` command, specifying RADIUS as the accounting method. For more information, refer to the chapter "Configuring Accounting."

2.5 RADIUS Configuration Examples

2.5.1 RADIUS Authentication and Authorization Example

The following example shows how to configure the router to authenticate and authorize using RADIUS:

```
aaa authentication login use-radius group radius local
```

The lines in this sample RADIUS authentication and authorization configuration are defined as follows:

`aaa authentication login use-radius radius local` configures the router to use RADIUS for authentication at the login prompt. If RADIUS returns an error, the user is authenticated using the local database. In this example, `use-radius` is the name of the method list, which specifies RADIUS and then local authentication.

2.5.2 RADIUS Authentication, Authorization, and Accounting Example

The following example shows a general configuration using RADIUS with the AAA command set:

```
radius-server host 1.2.3.4
```

```
radius-server key myRaDiUSpassWoRd
```

```
username root password AlongPassword
```

```
aaa authentication login admins radius local
```

```
line vty 1 16
```

```
login authentication admins
```

The lines in this example RADIUS authentication, authorization, and accounting configuration are defined as follows:

`radius-server host` command defines the IP address of the RADIUS server host;

radius-server key command defines the shared secret text string between the network access server and the RADIUS server host.

aaa authentication login admins group radius local command defines the authentication method list "admins," which specifies that RADIUS authentication and then (if the RADIUS server does not respond) local authentication will be used on serial lines using PPP;

login authentication admins command applies the "admins" method list for login authentication.